

# CLASSIC LED EMERGENCY LIGHT




JW/NM/W5100

#### **SAFETY INFORMATION**


- Please read and follow this product guide.
- Servicing and installation of this product must only be done by qualified electrical personnel.
- Do not expose components inside this product to dripping or splashing. Liquids may cause failure and/or fire hazard.
- Replace with Maxspid-approved battery only. Incorrectly replaced battery may cause failure and/or fire.
- Match the polarities of the mains supply with the terminal block and ensure it is firmly secured. Mismatch may cause electric shock.


#### **INSTALLATION GUIDE**

# **Unit Description**

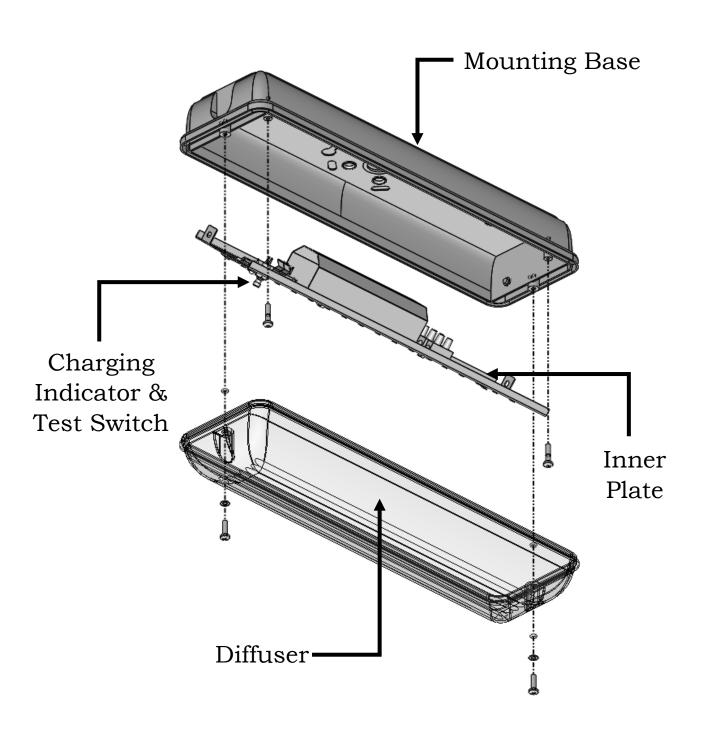


# **Mounting Guide**

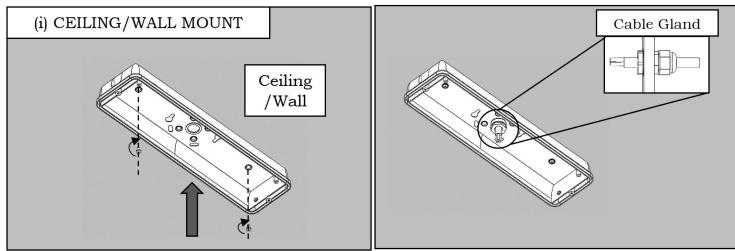

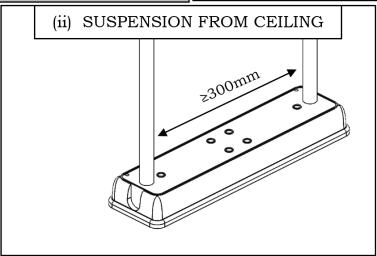

<sup>\*</sup>Seal all cable entry/mounting screws with cable gland/rubber gaskets for weather-proof application

### **Mains Supply Connection**

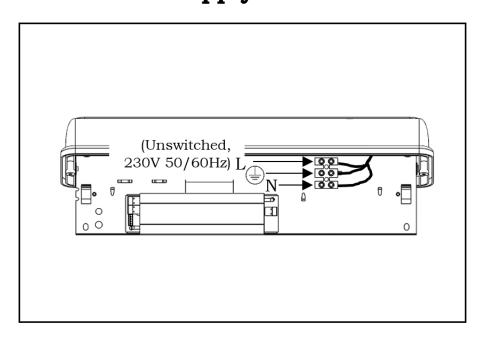

#### Note:

- LED charge indicator will be lit if installation is done properly.
- For first usage, ensure mains supply to the unit is turned on for 24 hours to fully charge the battery.
  - \*Interrupting the mains supply will discharge the battery.
- For complete maintenance procedures for self-contained emergency escape luminaires and exit signs, refer to Singapore Standard 563 Clause 13.
- Installation accessories are not provided unless otherwise stated.

#### TROUBLESHOOTING GUIDE

Problem	Possible Cause and Solution
Charge indicator off	No incoming mains supply
	Battery connector is disconnected
Unable to light up in	Battery is flat; Ensure the mains
emergency mode	supply is turned on to allow the
	battery to fully charge
	Battery is not properly charged;
Duration of lighting up	Ensure the mains supply is turned
	on to allow the battery to fully
in emergency mode is too short	charge; Ensure there is no
100 511011	interruption of power supply for 24
	hours